

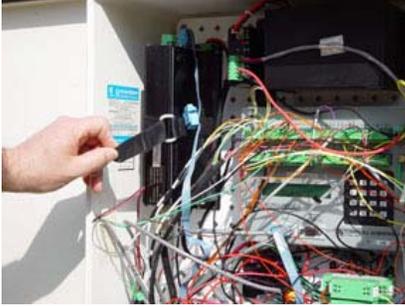


Procedure for Transmitter Replacement

1. Inside the Control Box replace the transmitter by, first, loosening the Velcro strap.

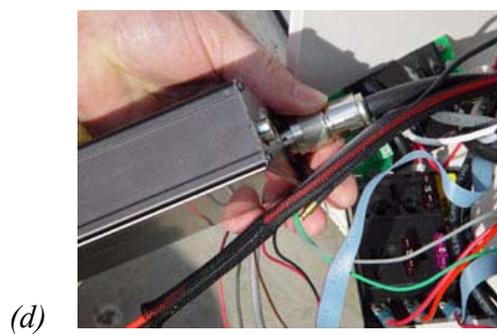

2. Unplug the power connector (top GND, +12V POWER (a)), unplug the “Blue or Gray” computer cable (top, CS I/O (b)), unplug the GPS Antenna cable (small black plug on bottom, GPS (c)), and unscrew the transmitter coax cable (bottom, RF OUT (d)).

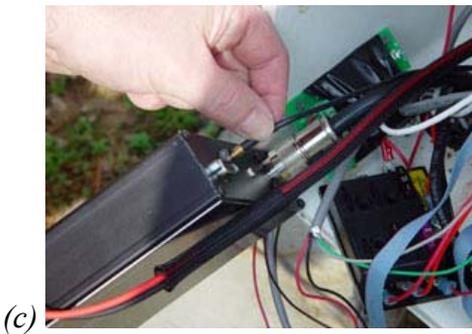

3. Replace the transmitter with the new one in the reverse order of the above.
4. Collect data from datalogger with Palm PDA as per included instructions.
5. Close the door, latch, and lock.
6. Use included FedEx label to return package to ATDD.